

X431PRO Actual Measurement: 2008 Dongfeng Nissan Sylphy anti-theft password read and calculating method of operation**[Functional description]**

Remove, install BCM system or key lost new matching key, need to do key registration function for the vehicle, and key registration steps need to obtain and calculate the security password


[Note]

1 turns on the ignition switch


[Operation description]

The following is the 2008 Nissan Sylphy based on the steps of anti-theft password read and calculating operation:


1. Turn on the ignition

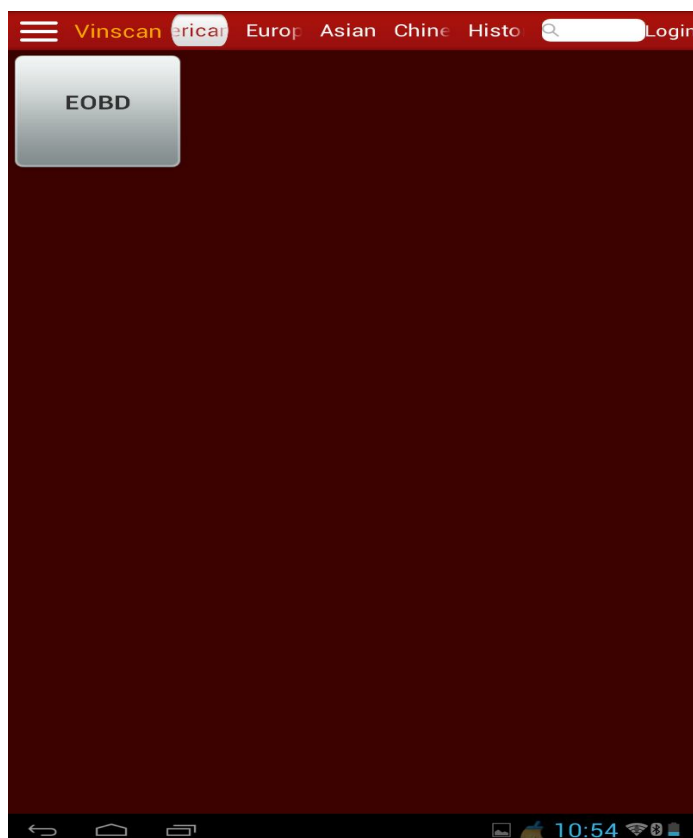


2. Select "NISSAN"

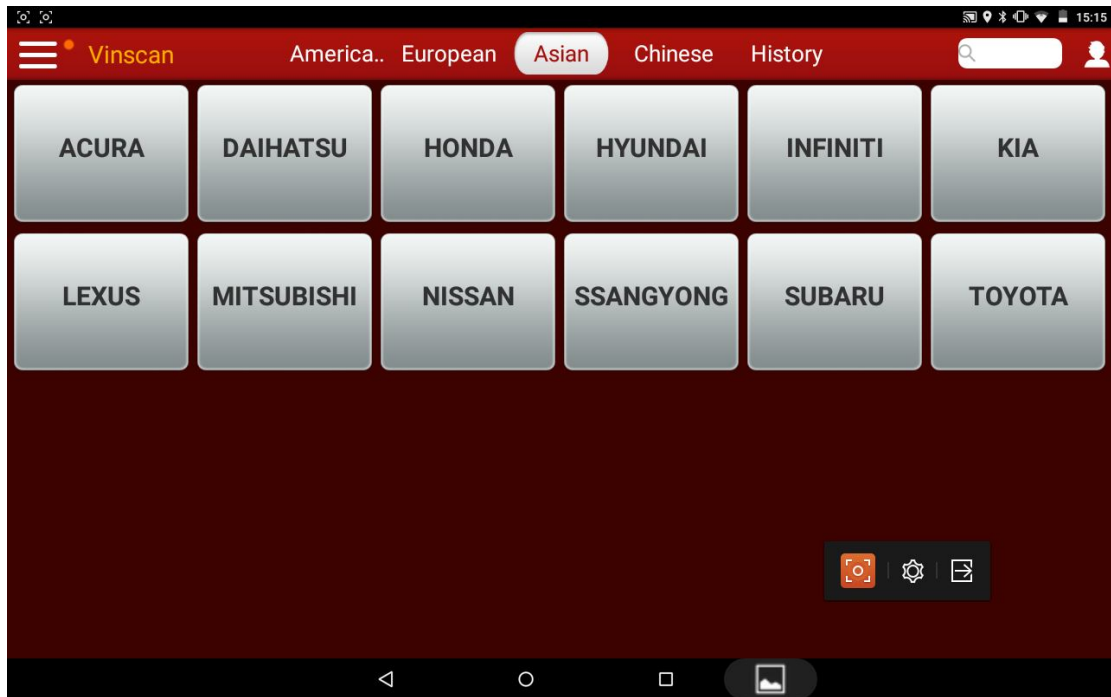


3. Select "V43.20" version

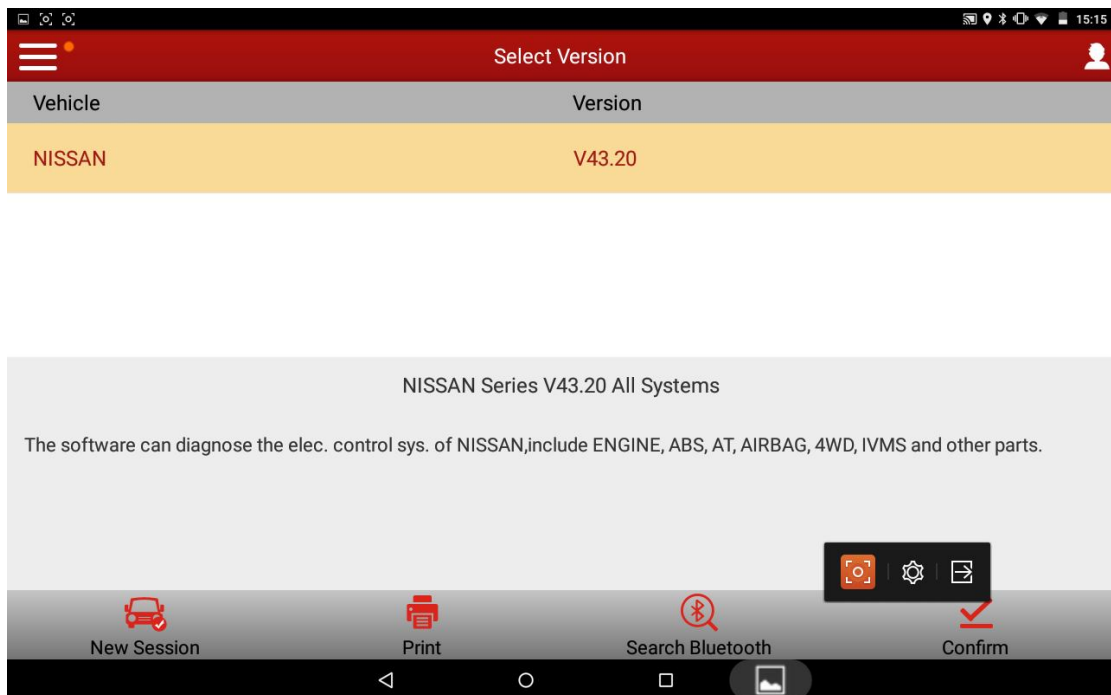


4. Select "16PIN"

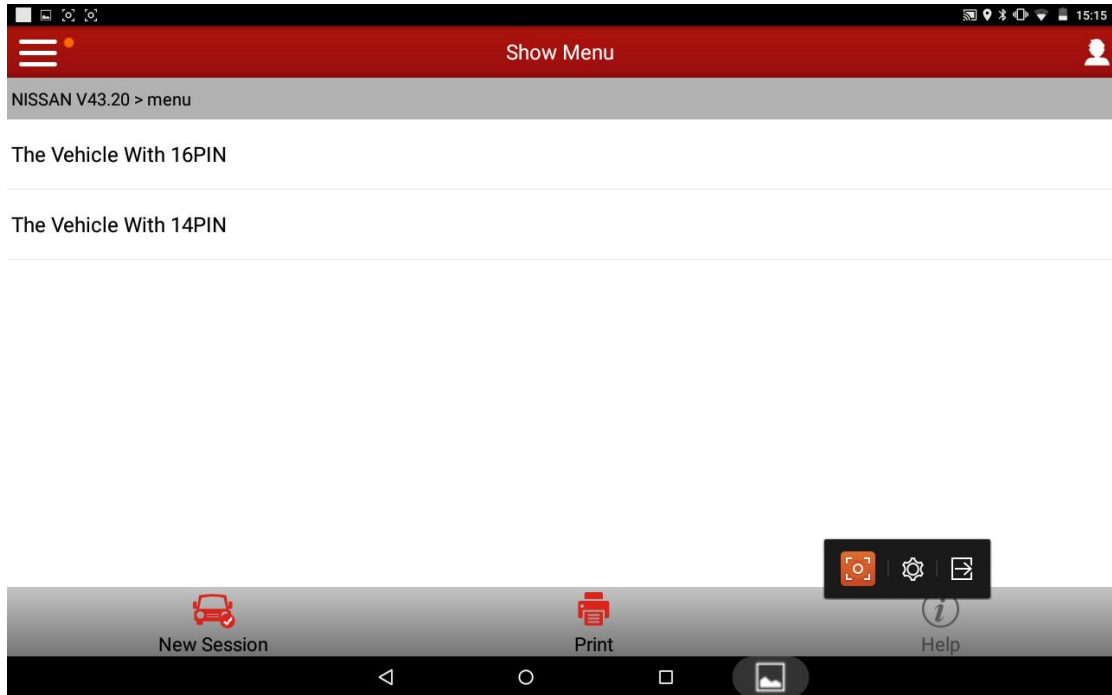


5. Select "Maintenance"

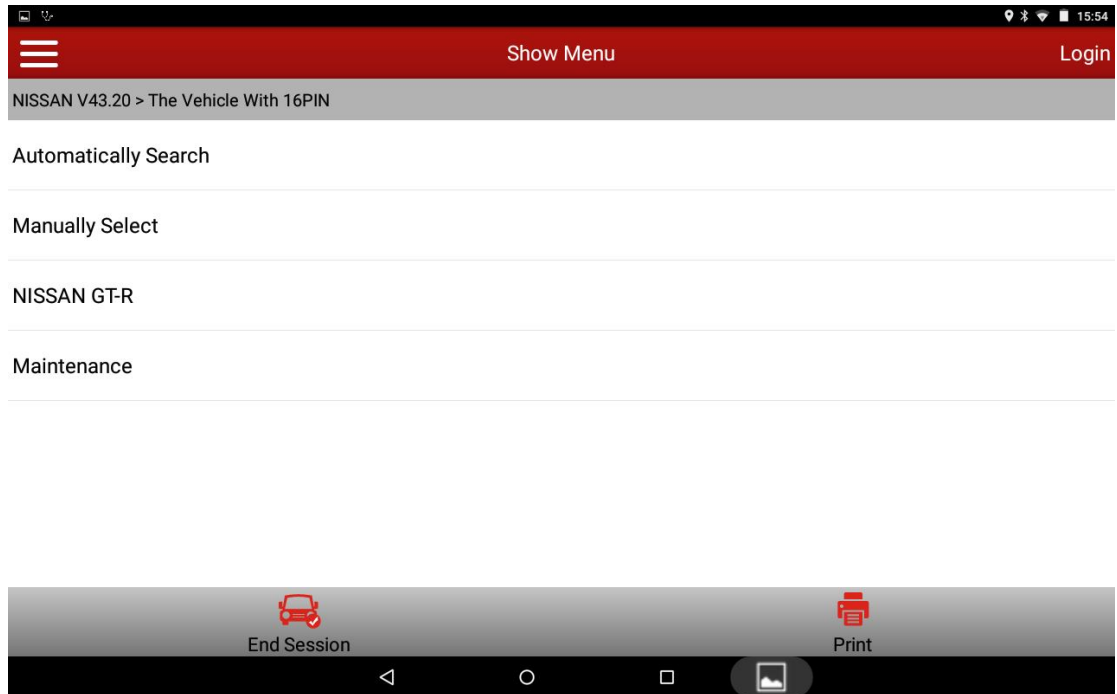


6. Select "NATS"

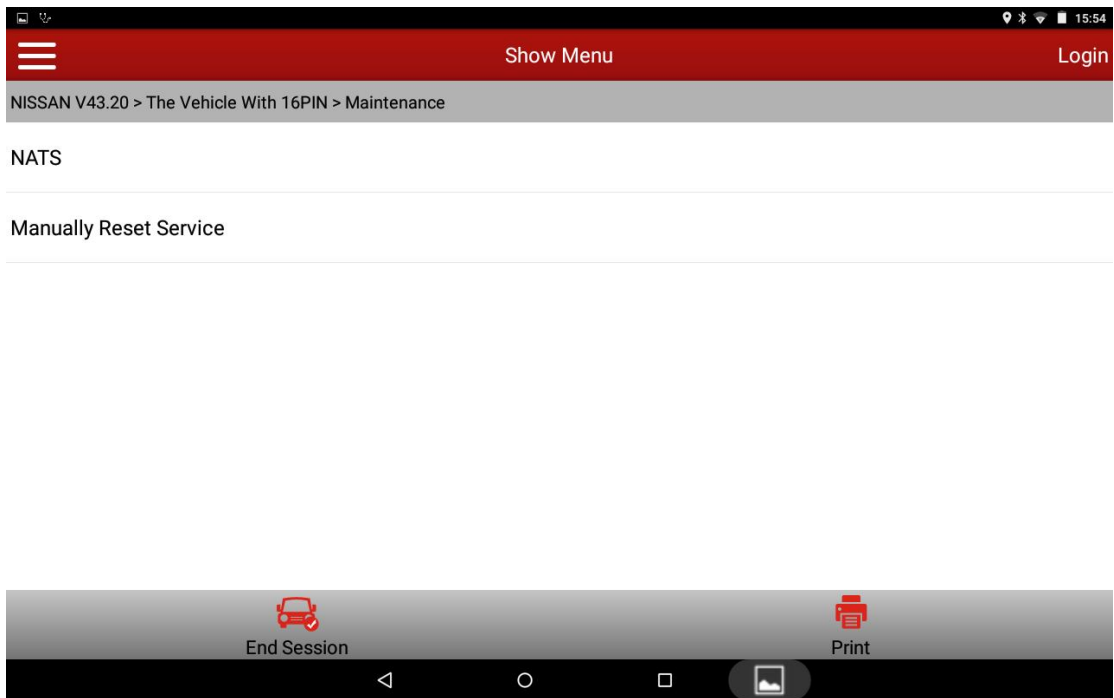


7. Select "General Mode"

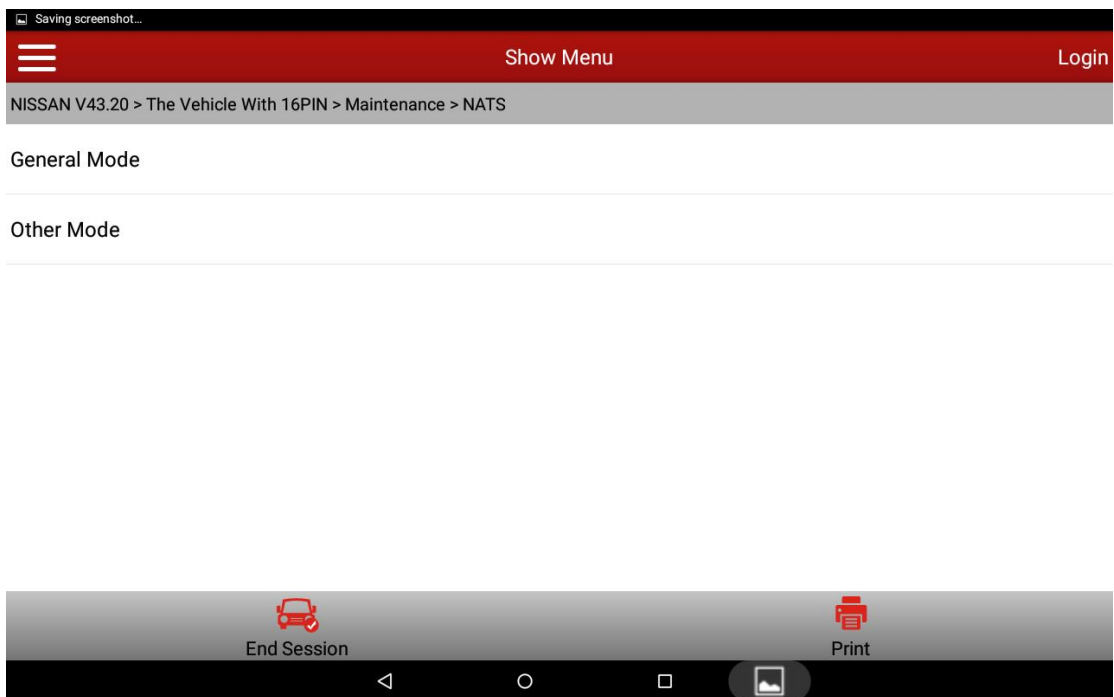

8. Select "Pin Code"

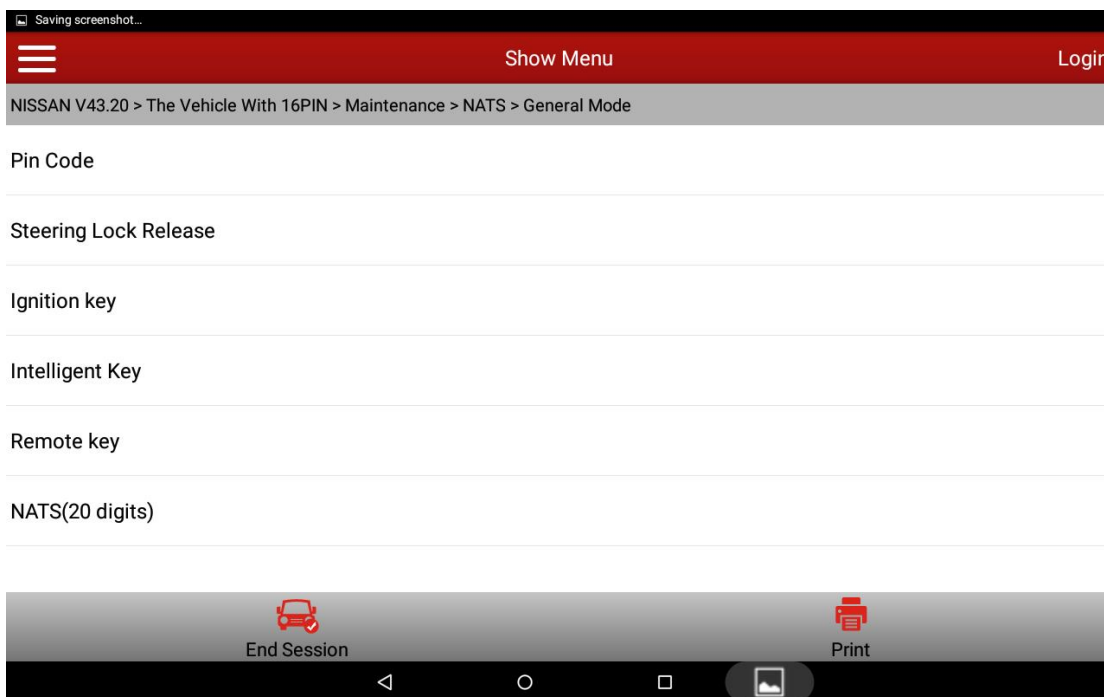

9. It displayed PIN CODE

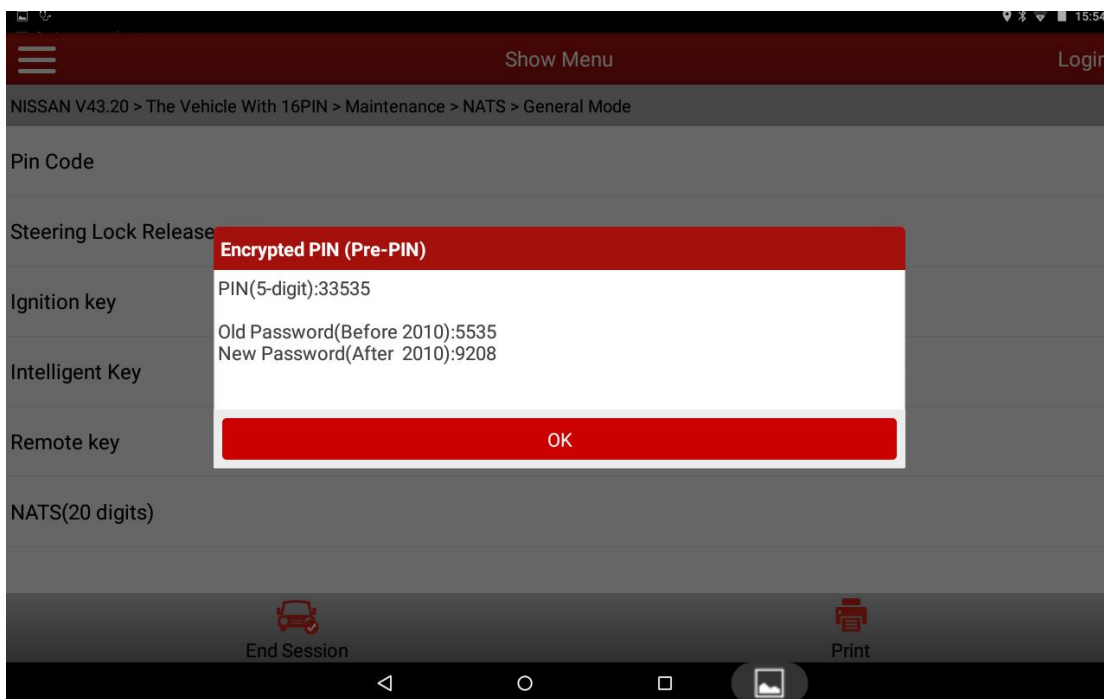

10. Select OK

LAUNCH is dedicated to pursuing good functions and addressing customer needs.
Follow LAUNCH, you will "make a little progress every day"!

