

【X431PROActual Measurement】 2011Buick Excelle GT zero the maintenance lamp operation method.

Actual Measurement: Buick Excelle GT, 2011.

Attention:

1. Switch on the ignition before executing function, not start engine;

Operation procedure :

1. Switch on the ignition, not start the engine.;
2. Select “ Maintenance lamp zero software V10.30 above.
3. Select “GM”, see pic1;



4. Select “ Software zero”, See pic2;

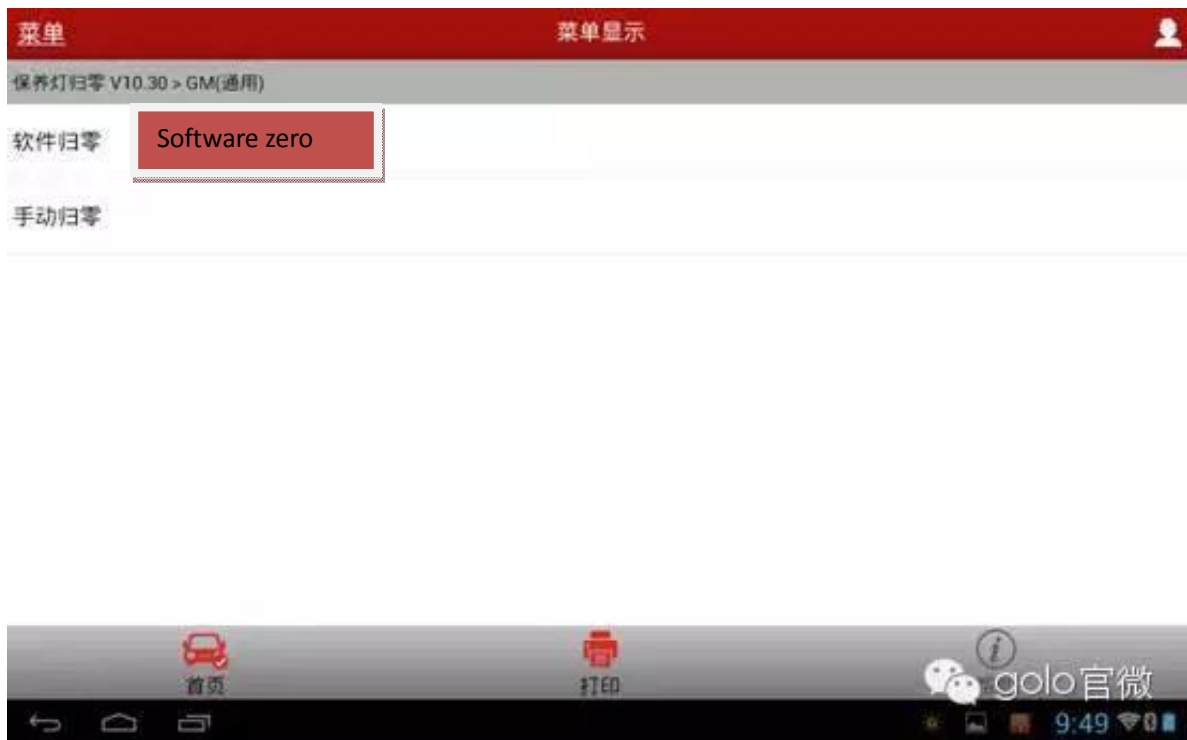


图2

5. Select “Automatic Scan”, see pict3

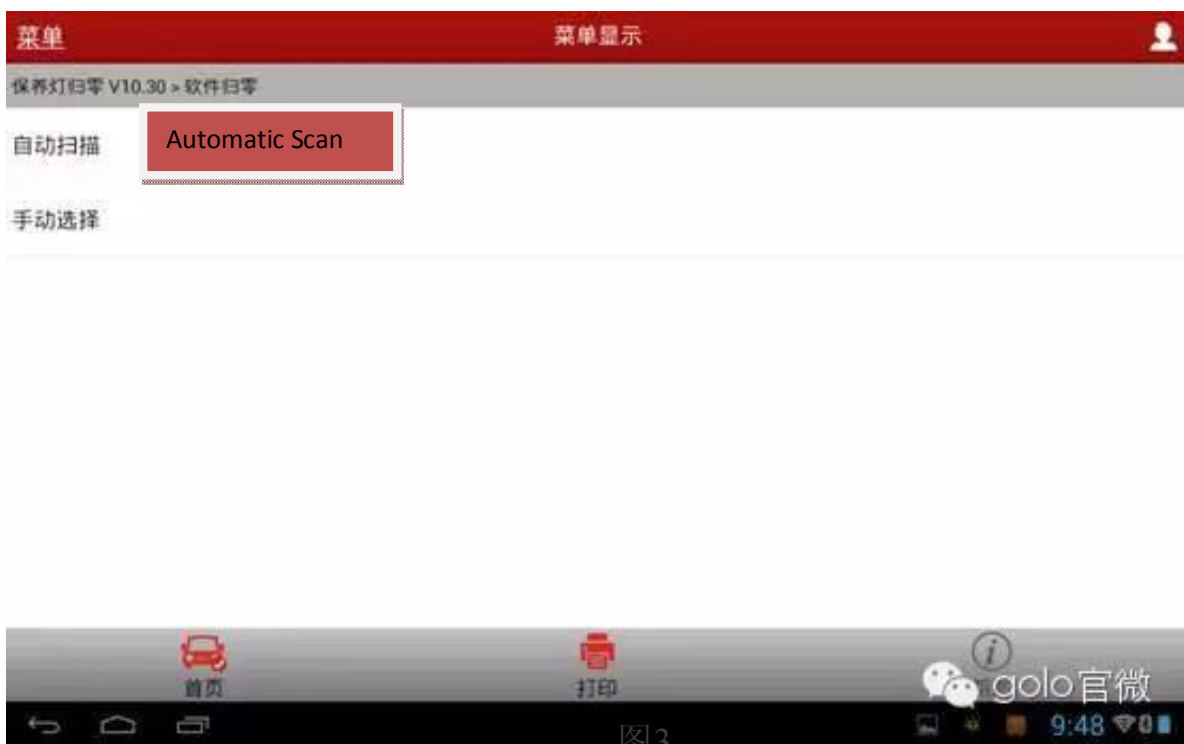


图3

6. Pop up “Switch on the ignition”. The window of vehicle state, Click “continue” see pic4:

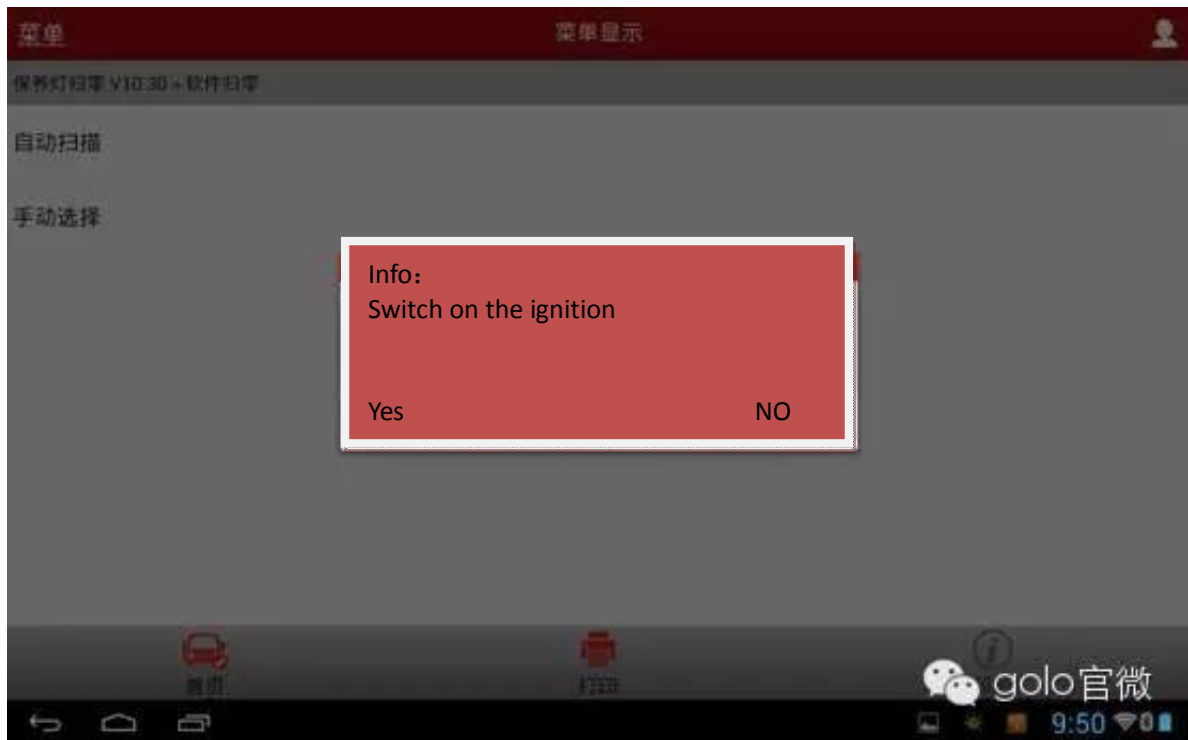


图4

7. Popup “Communicating, Please wait” Prompt Window, see pic5:

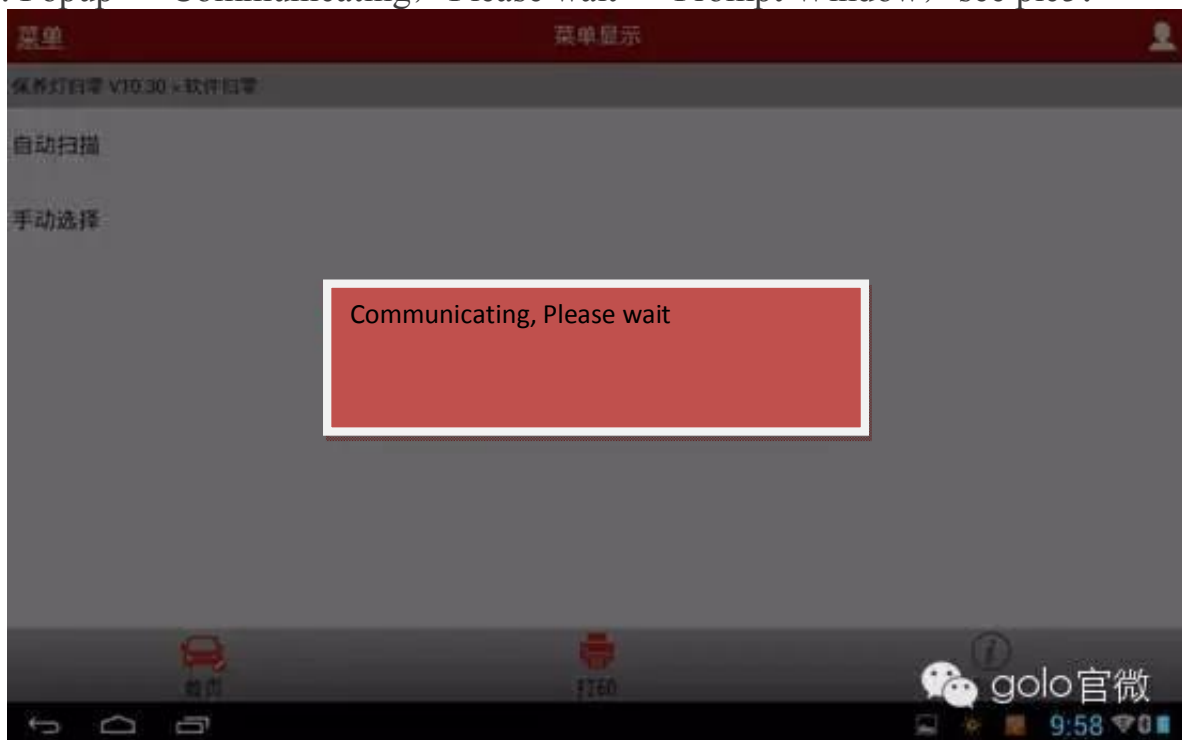


图5

8. Popup “Park the car, stop the engine, switch on the ignition”. The window of vehicle state. Click “Confirm” continue see pic6;

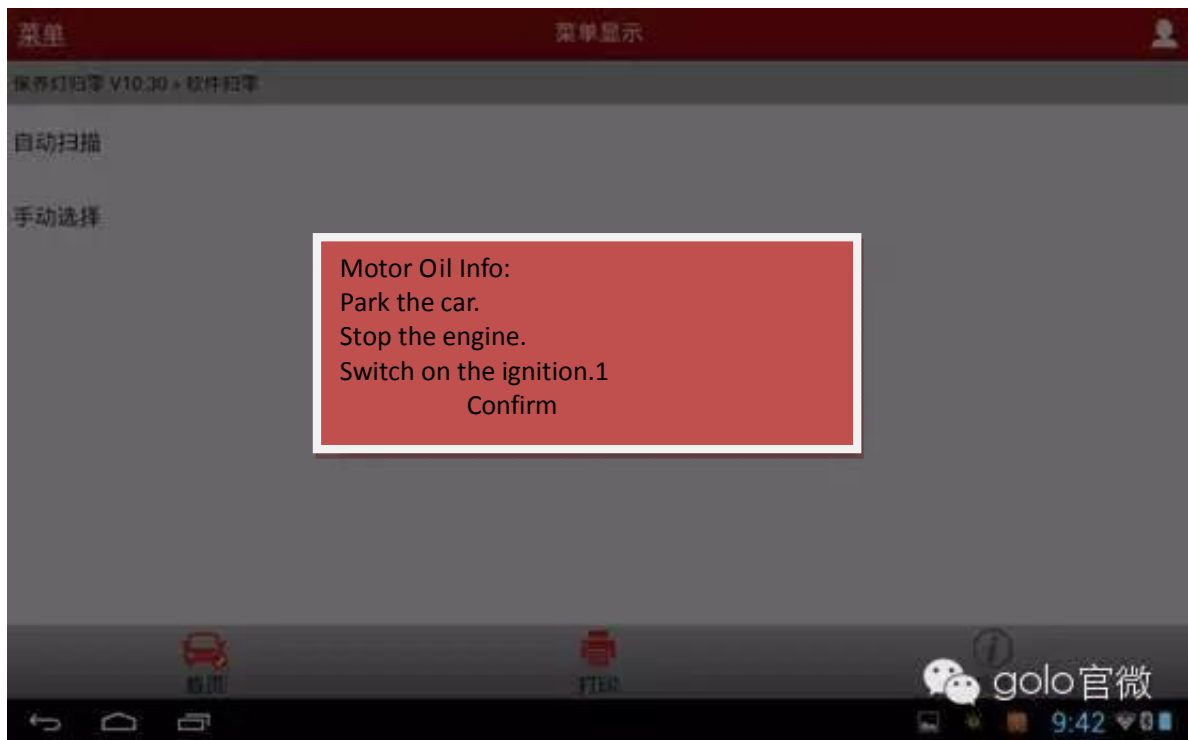


图6

9. Display the current value of the life of motor oil before executing the reset. if reset, please press “Confirm” .

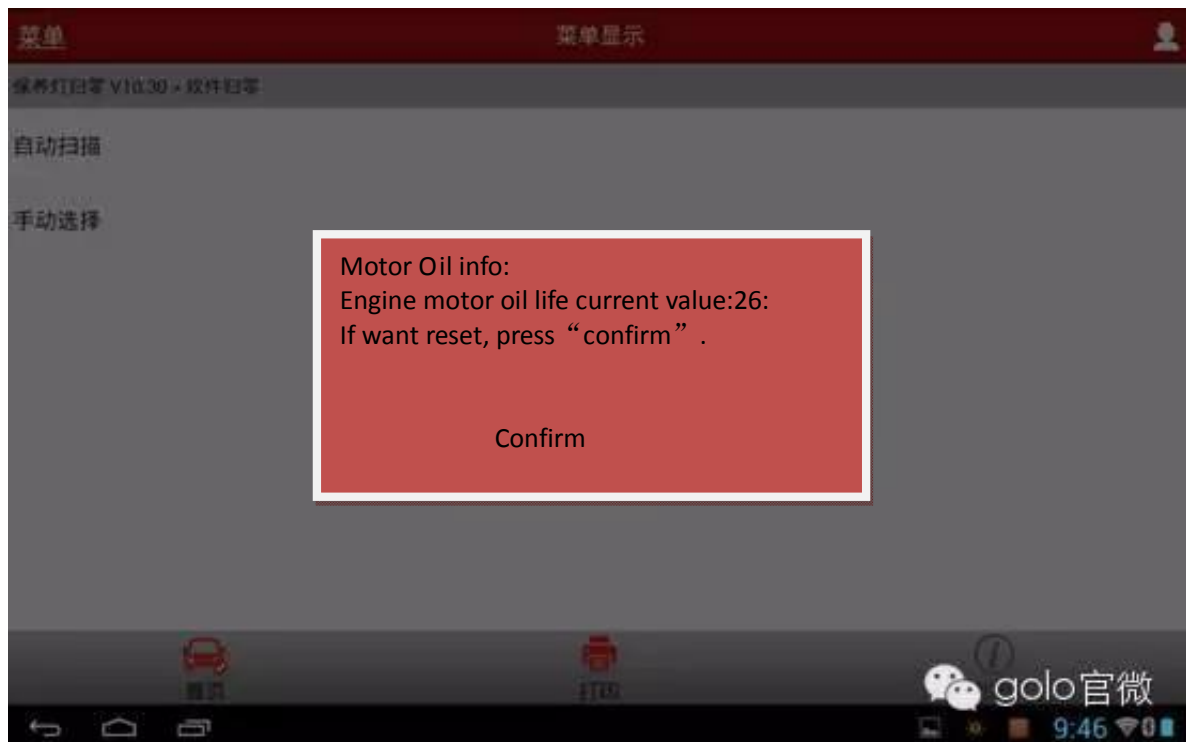


图7

10. Display engine oil life reset input edit box, according to prompt value, input the reset value, Click “Confirm” continue. see picture 8

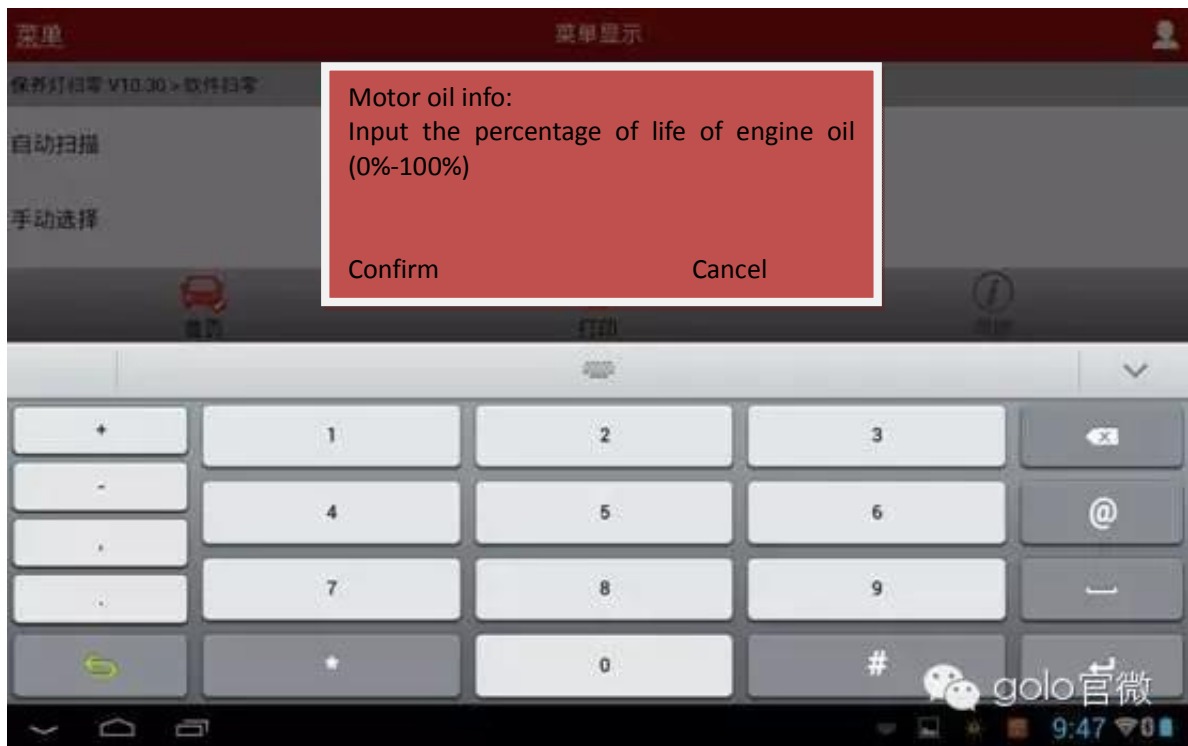


图8

11. After reset successfully, show “Executing Success” Press “Confirm” continue. see picture 9:


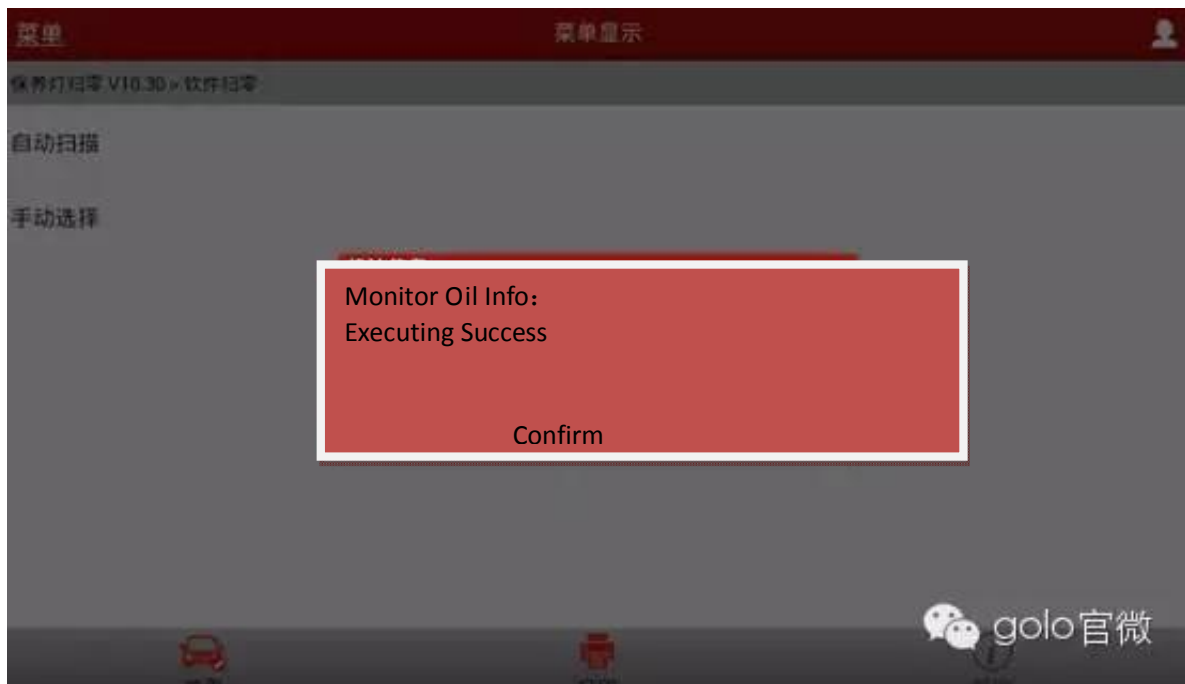


图9

12. Show the current value of the engine life ,when reset successfully. Press “confirm” to terminate this reset operation. See pic10.

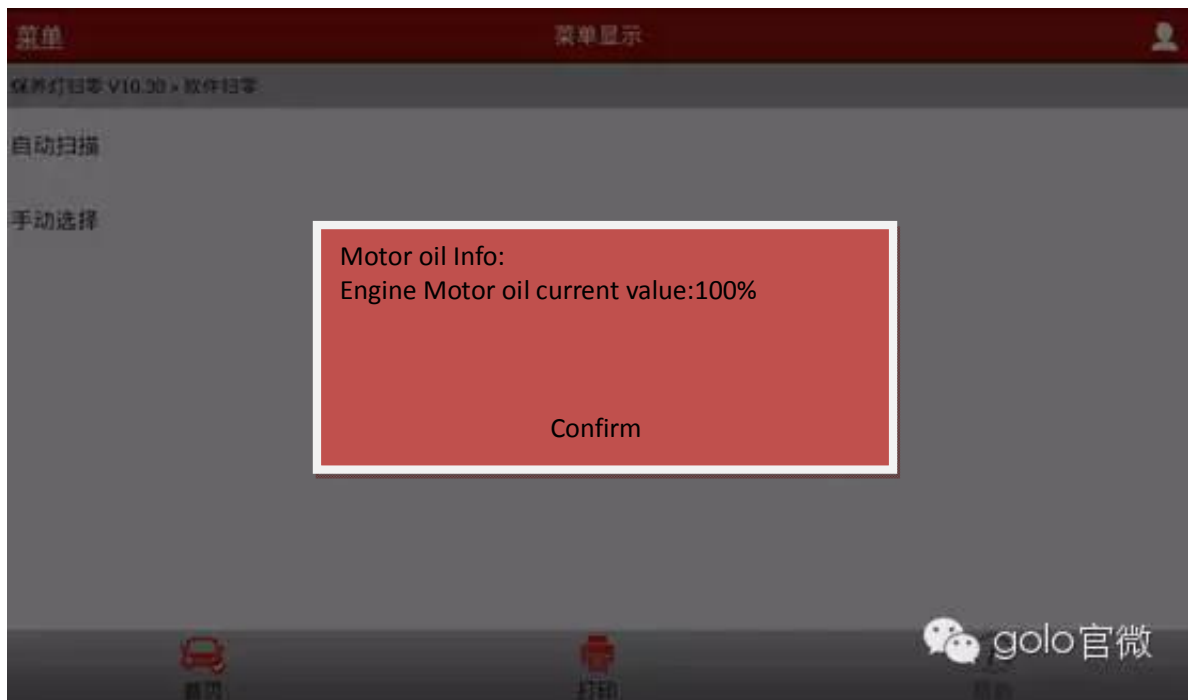

pic10

13. Exit the software , shutdown engine. Operation procedure end.



长按指纹“识别二维码”关注 **golo官微**