

2012 The Great Wall Bosch ABS Pump exhaust method

Function Description

1. The following situations require learning: when the brake is changed, the brake pipe is opened, the hydraulic parts of the brake system are replaced, or the brake pedal is changed.

When it is soft, low and braking, it needs to exhaust the ABS.

2. This function is applicable to Bosch ABS system; Applicable to all models of the above system; The Great Wall is illustrated below.



Note:

1. Switch on the ignition, car no trouble;

2. Execution sequence: Left-Rear, Left-Front, Right-Front, Right-Rear.

3. In the process of execution, tread the brake pedal, which is beneficial to exhaust more fully.

4. It needs to be operated strictly according to X431 diagnostic instrument. If the exhaust is not successful, the main reason is not to operate according to the requirements, and can try again;

Operation Procedure:



1. Switch on the ignition;

2. Select Great Wall V35.42 above;

3. Select Havel 6;

4. Select-2012;

5. Select ABS,

6. Select Bosh ABS 9ESP;

7. Select Air-Bleeding, see as pic1;



Pic1

8. Clear the fault code, see as pic 2;



Pic2

9. If the above test conditions are met, after [is], the exhaust attention of the ABS pump is shown, as shown in figure 3;



Pic3

10. According to [sure], according to instructions, in order to open the left hind, left front, right front and right rear wheel exhaust bolt, note that in each cylinder position emptying, every 2-3 seconds on a brake pedal.



长按指纹“识别二维码”关注 **golo**官微