

# 2011 PEUGEOT 3008 brake pad replaced method

## Operation Method:

1. Switch on the ignition, not start the engine;
2. Select brake pad reset software V10.20 above;
3. Select “PEUGEOT”;
4. Select “Auto-Scan” or the “Manual Selection”;
5. Select “3008”;
6. Prompt to turn on the ignition, then "Prompt for communication, please wait ...", display the percentage, display after completion Warning message, as shown in Figure 1;



Pic1

7. Select "Yes" button to display the menu, as shown in Figure 2;



Pic2

8. Select "brake wire replacement" menu, prompt information, as shown in Figure 3;



Pic3

9. Select "Yes" button to display the menu, as shown in Figure 4;



pic4

10. Select "placed in the installation / removal position" menu, prompt information, as shown in Figure 5;



Pic5

11. Select "wire tensioning" menu, prompts to turn off the ignition switch, turn on the ignition switch information, turn on the ignition switch, the wire tensioning function is completed, as shown in Figure 6;



Pic6

12. Select "Electronic Parking Brake Calibration" menu, prompt information, select "OK" button, as shown in Figure 7;



Pic7

13. Countdown 15s, as shown in Figure 8;



图8

14. Countdown 15s, prompt information, as shown in Figure 9;



Pic9

15. 选择“确定”按钮，提示“电子驻车制动导线标定完成”，点击“确定”完成，如图10；



图10

16. Return to the previous menu, select "Electronic parking brake replacement" menu, prompt information, as shown in Figure 11;



Pic11

17. Select "Yes" button, display "placed in the installation / removal position", "tighten the wire," "Electrical parking brake calibration" menu, select "placed in the installation / removal position" menu, prompt information, as shown in Figure 12;



Pic12

18. The "wire tensioning" and "Electrical Parking Brake Calibration" functions are the same as the "wire tensioning" and "Electrical Parking Brake Calibration" function operations in the "Brake Wire Replacement" function, and will not be repeated here.



长按指纹“识别二维码”关注 **golo官微**

