


【X431Pro Actual Measurement】 2013Renault FLUENCE throttle matching operation method.

Actual Car Model: Renault FLUENCE, 2013, VIN=VF1ZL4T2DC2*****


Operation Procedure

1. Switch on the ignition, not start the engine;
2. Select throttle matching V10.11;
3. Select “RENAULT”, see pic1;

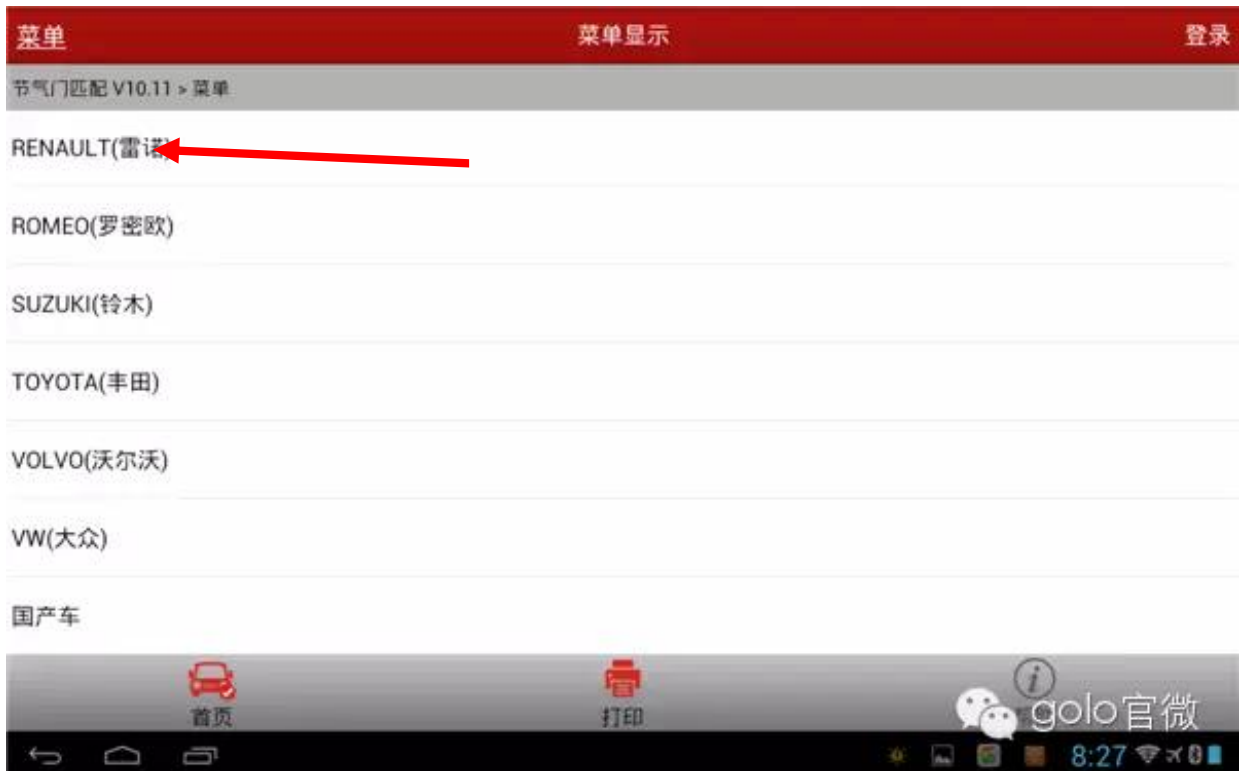

pic1

4. Select “New SM3/FLUENCE” , see pic2;

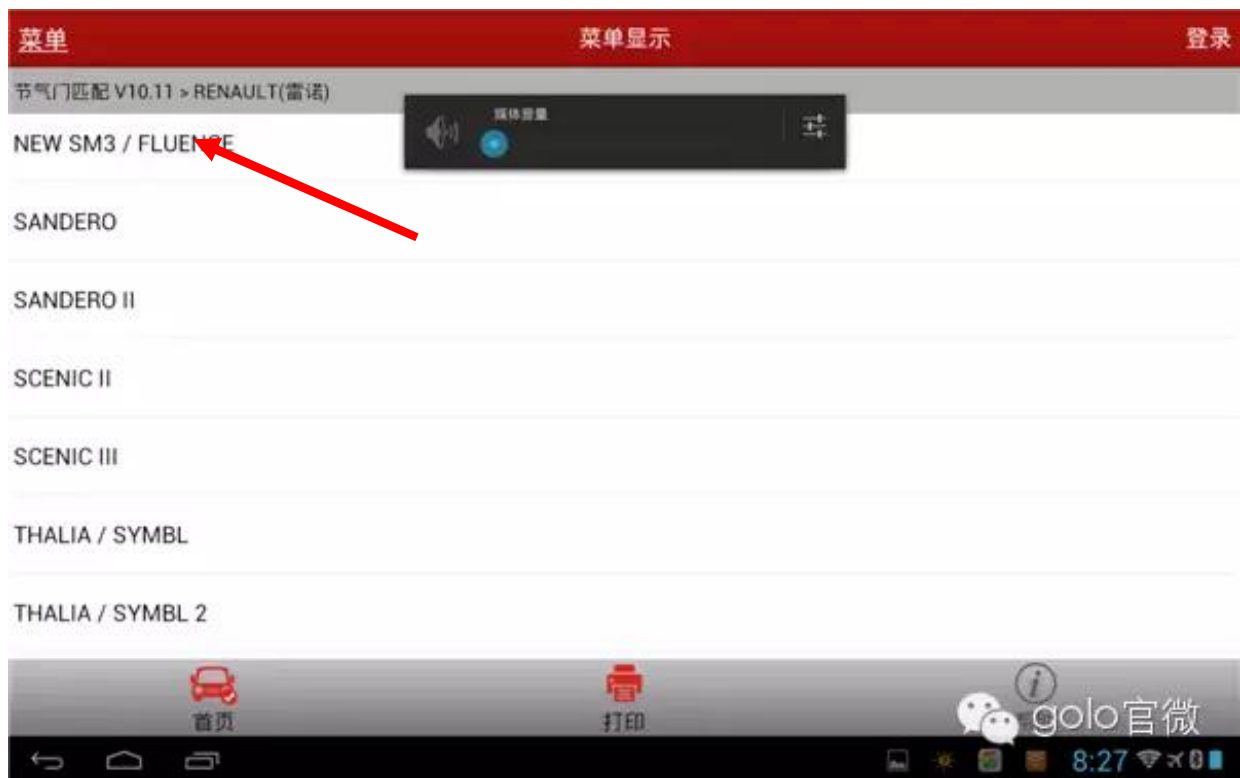

pic2

5. Pop up the dialog box ,click “Ok”,
see pic3;



pic3

6. Select “ Electric Throttle”, pop up dialog box and then click “OK”
See pic 4;




pic4

7. The execution process takes a few seconds, see pic5;



pic5

8. Prompt "Instructions completed"
Operation finished. see pic6.

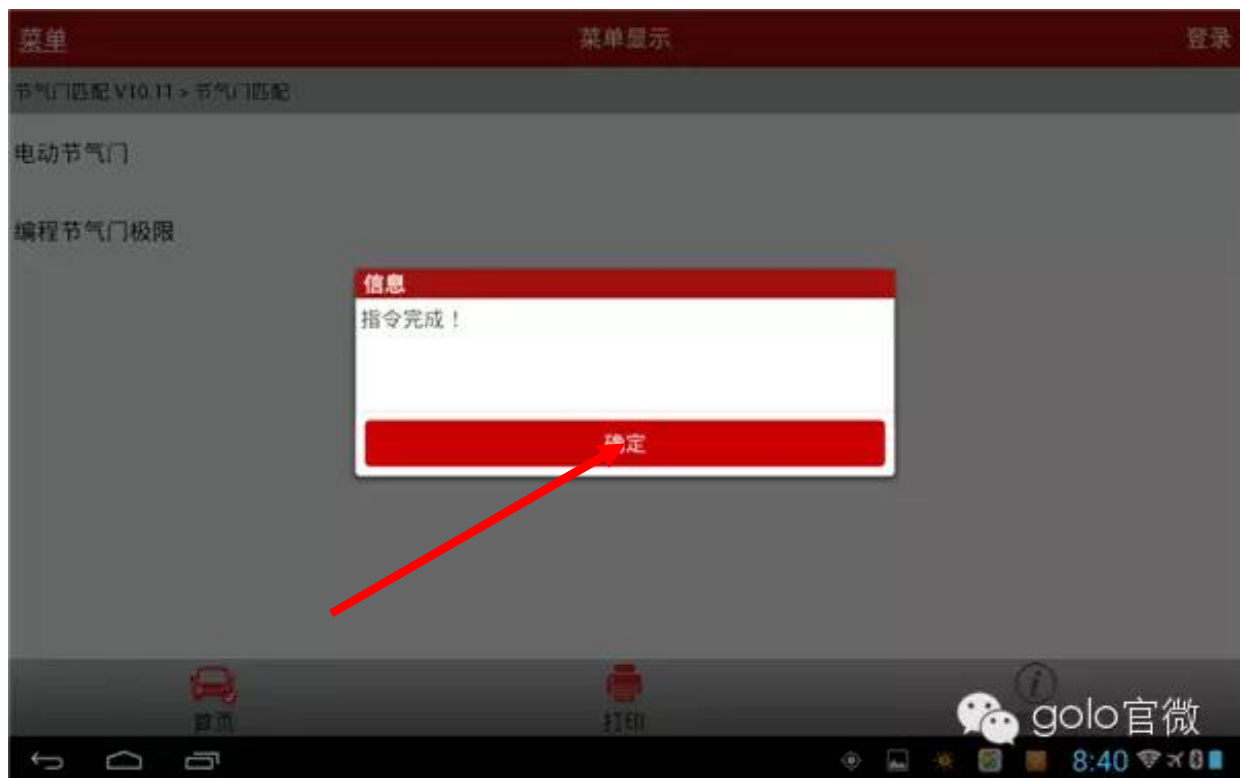

pic6



长按指纹“识别二维码”关注 [golo官微](#)