

2010 Freelander 2 Skylight Calibration

Module: 2010 Freelander 2, VIN: SALFA2BA7AH19****;



Function: After replacing skylight.

Operation:

1).Choose “Intelligent diagnostic”, confirm all vehicle information;



Picture 1

2).Choose “Quick test”;



Picture 2

3). Choose “BCM” ;



Picture 3

4). Choose “Special function” ;



Picture 4

5). Switch on the ignition;



Picture 5

6). Read all prompt;



Picture 6

7).Waiting, skylight will open close for several times;



Picture 7

8). Press “Yes” ;



Picture 8

9). Turn off the ignition;



Picture 9

10). Switch on the ignition;



Picture 10

11). Clear all DTC;




Picture 11

12). Turn off the ignition;



Picture 12

13). Waiting;

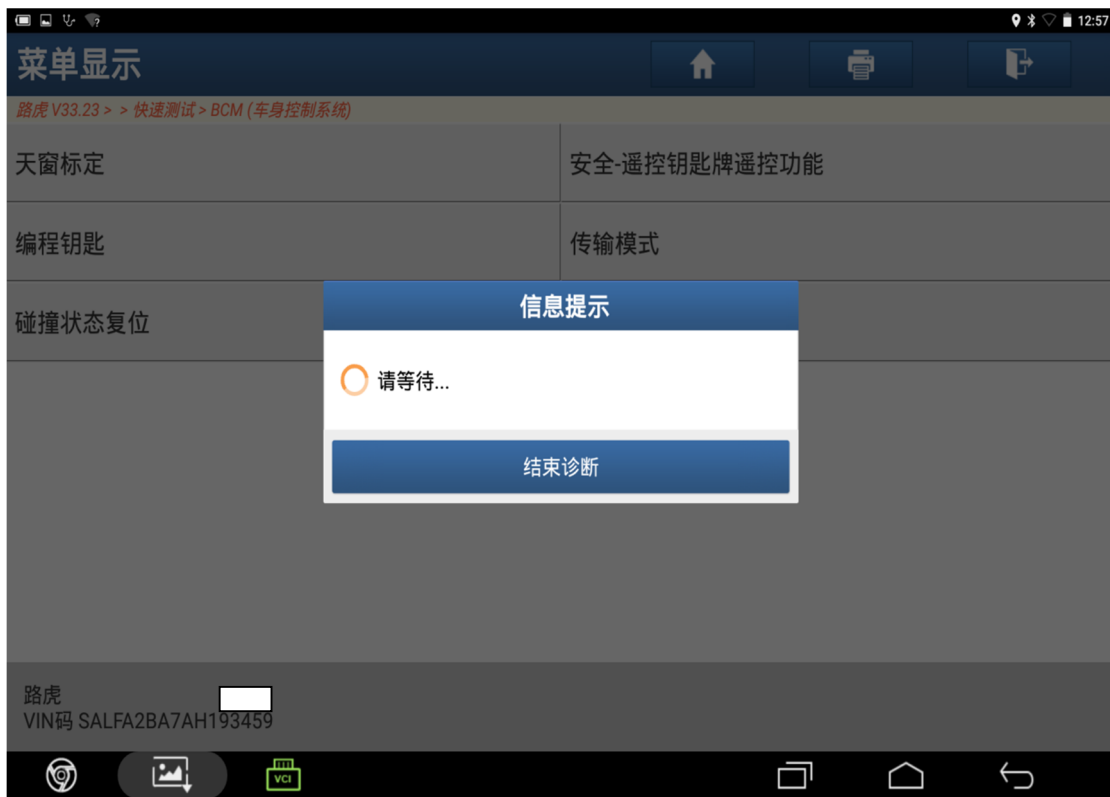

Picture 13

14). Switch on the ignition;



Picture 14

15).Function finished;



Picture 15